# Medium Speed Current Modulator MSM 20-25 Part Number 10100450 Operating Manual





**English Edition** 



# Description

The medium speed current modulator MSM 20-25 is a linear modulator for driving arbitrary current waveforms with a power of up to 480 W into high voltage laser diodes.

Current waveforms can be CW, pulsed, modulated or mixed with frequencies up to 50 KHz and currents up to 20 A.

For achieving maximum performance it is required to mount the modulator as close as possible at the laser diodes and to connect it with low inductance.

The modulator is small and compact and it is designed for mounting it with low inductance as close as possible at the laser diodes or for integrating it in laser diode modules. Ask our support for more information and for important hints.

The modulator has two analogue inputs for the current setpoint, a 50 Ohm input with a bandwidth of 50 KHz and a high impedance input with a bandwidth of 50 KHz.

Both inputs cover the full current range.

Additionally there is a 10 turns potentiometer for generating a CW-current (bias current).

All set points are added and form the effective current set point.

A set point with a negative sign acts subtracting.

# Power dissipation

Dynamic performance of the modulator normally increase with supply voltage, however the electrical power dissipation increase with supply voltage too.

A good compromise is to choose a supply voltage of approx. 1 V above the diode voltage.

Simple formulas for calculating power dissipation:

Us Supply Voltage (V)

Ud Diode Voltage (V)
Idcw Diode Current CW (A)

Idpeak Diode Current peak value (A) (für sinusoidal and rectangle currents)

tp Pulse Duration (s)

f Pulse Frequency (Hz)

Pi Power Dissipation (W)

For operating with CW current:

 $P_{I} = (U_{s} - U_{d}) \times I_{dcw}$ 

For operating with sinusoidal current:

 $P_I = (U_s - U_d) \times (I_{dpeak} / 2)$ 

For operating with rectangle current:

PI = (Us - Ud) x Idpeak x tp x f

For operating with sinusoidal current plus CW current:

 $P_I = (U_s - U_d) \times ((I_{dpeak} / 2) + I_{dcw})$ 

For operating with rectangle current plus CW current:

 $P_{I} = (U_{s} - U_{d}) \times (I_{dpeak} \times t_{p} \times f + I_{dcw})$ 



Calculating power dissipation with arbitrary current waveforms is rather difficult, therefore a good method for estimating power dissipation is to measure the temperature of the modulator.

The modulator has a precise temperature measurement system inside. The SA-TEMP output reflects the actual temperature in the range of 0  $^{\circ}$ C ... +80  $^{\circ}$ C. Values of 60  $^{\circ}$ C (3 V) to 70  $^{\circ}$ C (3.5 V) are still not critical.

#### **Current Limit**

The modulator has a diode current limit mechanism which has a response time of approximately  $600~\mu s$ . If the maximum allowed current is exceeded for more than  $600~\mu s$ , the modulator will be switched off and remains in an off state.

The response time of 600 µs allows driving currents which are higher than the specified CW current. Thus care must be taken to prevent laser diodes from damage.

#### General Instructions

Never run a negative current set point (effective current set point), this may lead to an overshoot if you alter the negative current set point to a positive current set point.

If you use a pulse signal generator or a function generator for the current set point, always disconnect it before you change any ranges. Some generators create high voltage or undefined signals if you change ranges, this may damage diodes.

If you are not sure what will happen, we recommend the following procedure for starting up: Disconnect the diode and short-circuit the output of the modulator (connect X6- to X7+ via a short thin metal sheet).

Connect an oscilloscope at the X3 current monitor output, terminate the oscilloscope input with 50 Ohm.

Connect the supply voltage for the diode at X4- and X5+, take a power supply with an adjustable output voltage of approx. 0 V  $\dots$  2 V. Adjust 0 V.

Connect the supply voltage (3 V ... 6 V) for the internal electronics at X4- and X1-8.

Feed in a square wave with a pulse length of approx.  $50 \mu s$ , a repetition rate of approx. 100 Hz and an amplitude of +500 mV (for 20 A) at X2 (CA-DCSP1).

Turn on the power supply for the internal electronics, the green LED must lit. Turn on the power supply for the diode (0 V).

#### Enable the modulator

Adjust the voltage of the power supply for the diode to approx. 1 V ... 2 V and watch the X3 current monitor output.

The X3-signal must be a square wave with a pulse length of 50  $\mu$ s, a repetition rate of 100 Hz and an amplitude of 50 mV.

If the X3-signal is ok (no overshoot or ringing), disable the modulator and turn off the power supplies.

Connect the diode and adjust the supply voltage for the diode to a voltage of 1 V  $\dots$  2 V above the diode voltage. Be aware of the maximum allowed power dissipation of the modulator.



## Adjustment elements

10 turns potentiometer for a CW current set point (bias current).

The potentiometer covers teh full range of 0 ... 20 A.

#### Indicator elements

Green LED for indicating status Ready

Red LED for indicating status Excess Temperature

#### Connectors

X1, 8-pole single row male connector for control signals, status signals and supply voltage for the internal electronics

X2, female coaxial jack MMCX for current set point 1

X3. female coaxial iack MMCX for actual current (current monitor)

X4-, connection bolt  $\varnothing$  8 mm with female thread M4 for Supply Voltage Minus

X5+, connection bolt Ø 8 mm with female thread M4 for Supply Voltage Plus

X6-, connection plate with six female thread M1.6 for laser diode cathode

X7+, connection plate with five female thread M1.6 for laser diode anode

## **X1 Control Port**

 
8-pole single row male connector

Manufacturer: ERNI Part number 214014

Mating plug:

8-pole single row female connector

Manufacturer: ERNI Part number 224396



CA=Control Data Analog CD=Control Data Digital SA=Status Data Analog SD=Status Data Digital

Inputs		
Pin	Name	Function
1 2 3 4 8	GND CA-DCSP2 CD-ENABLE CD-RESET SVI+	Signal Ground Diode Current Set Point 2 Enable Reset Supply voltage for the internal electronics
Pin	Name	Function
1 5 6 7	GND SA-TEMP SD-READY SD-EXTEMP	Signal Ground Temperature Ready Excess Temperature



#### X2 Control Port

Female coaxial iack MMCX

# CA-DCSP1

Diode Current Set Point 1



## X3 Current Monitor Port

Female coaxial iack MMCX SA-DCACT

Diode Current Actual



#### X4-

Connection bolt Ø 8 mm with female thread M4 Supply Voltage Minus

#### X5+

Connection bolt Ø 8 mm with female thread M4 Supply Voltage Plus

#### X6-

Connection plate with six female thread M1.6 Laser Diode Cathode

### X7+

Connection plate with five female thread M1.6 Laser Diode Anode

## Signal description

#### SVI+

Supply voltage for the internal electronics Required supply voltage: 3 V ... 6 V Supply current: 300 mA approx. Plus must be connected at X1-8, Minus at X4-.

### CA-DCSP1 (X2)

Control Analog - Diode Current Set Point 1 Analog input 0 ... 500 mV, input impedance 50 Ohm 0 ... 500 mV corresponds to a diode current of 20 A.

#### CA-DCSP2 (X1-2)

Control Analog - Diode Current Set Point 2 Analog input 0 ... 5 V, input impedance 10 KOhm 0 ... 5 V corresponds to a diode current of 20 A.

Diode Current Set Point 1, Diode Current Set Point 2 and the current value of the bias current potentiometer are added internally and form the effective current set point. A current set point with negative sign acts subtracting.



## SA-DCACT (X3)

Status Analog - Diode Current Actual

Analog output 0 ... 100 mV (off-load voltage), output impedance 50 Ohm, reflects the actual diode current.

0 ... 100 mV corresponds to a diode current of 0 ... 20 A.

For maximum performance the coaxial cable should be terminated with 50 Ohm. In this case 0 ... 50 mV corresponds to a diode current of 0 ... 20 A.

# SA-TEMP (X1-5)

Status Analog - Temperature

Analog output 0 ... 4 V, reflects the actual temperature of the modulator.

0 V corresponds to 0 °C. 4 V corresponds to +80 °C.

#### CD-ENABLE (X1-3)

Control Digital - Enabel

Digital TTL input. High if left open.

A Low-Signal or pulling the input to GND enables diode current.

#### CD-RESET (X1-4)

Control Digital - Reset

Digital TTL input, High if left open.

A Low-Signal or pulling the input to GND resets the modulator if there was an error (maximum allowed current exceeded or excessive temperature).

# SD-READY (X1-6)

Status Digital - Ready

Digital TTL output, High if there are no errors.

#### SD-EXTEMP (X1-7)

Status Digital - Excess Temperature

Digital TTL output, High if the temperature of the modulator has exceeded 80 °C.

The modulator will be switched off and remains in an off state.

SD-READY signal goes Low, the green Ready-LED goes out and the red

Excess Temperature-LED lits.



## **Specification**

Supply voltage for the internal

electronics 3 ... 6 V Supply current 300 mA

Supply voltage for the diode  $1 \dots 25 \text{ V}$  Supply current 21 A max

Diode voltage 0 ... 24 V

Diode current 0 ... 20 A

Frequency bandwidth DC ... 50 KHz (CA-DCSP1)
Frequency bandwidth DC ... 50 KHz (CA-DCSP2)

 $\begin{array}{lll} \mbox{Rise time} & 9 \ \mu \mbox{s} \\ \mbox{Fall time} & 11.5 \ \mu \mbox{s} \\ \mbox{Accuracy} & \pm 0.2 \ \% \\ \mbox{Linearity} & \pm 0.2 \ \% \\ \mbox{Temperature stability} & \pm 100 \ \mbox{ppm} \ / \ \ \mbox{°C} \end{array}$ 

Current Limit 20 A, not adjustable, response time 600 µs

Accuracy of SA-DCACT output ± 2 %

Power dissipation allowed 30 W max cooling required

Operating temperature range 0 ... +45 °C

Dimensions 95 x 61 x 20 mm

Weight 250 g

Part Number 10100450


Scope of delivery:

Fast Diode Current Modulator
8-pole single row female connector
2 pcs screw M4x6 DIN 7985
11 pcs screw M1.6x3 DIN 7985
11 pcs washer A1.7 DIN 433
Part Number 10100450
Part Number 10701642
Part Number 10701609
Part Number 10705300

Accessories:

Buffer Capacitor 13200 µF / 50 V Part Number 10231090



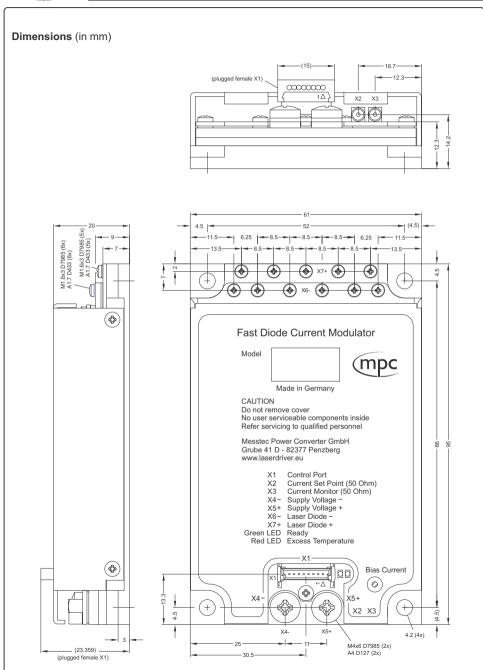

Release 1.0 2012 © Messtec Power Converter GmbH www.laserdriver.eu



### Contact information

Messtec Power Converter GmbH Grube 41

D-82377 Penzberg

www.laserdriver.eu

Phone +49 (0) 8856-80306-0 Fax +49 (0) 8856-9998 info@powerconverter.eu www.powerconverter.eu

Technical subject to change without notice.