MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Document: 10100160OM Revision: 1.0 Date: 19.09.2022		



TEC-controller 3A



Warning! Risk of exposure of hazardous laser radiation in combination with laser light emitting devices!

Revision	1.0					
Cre	ated	Appr	oved	Relea	ased	Form
19.09.2022	OWa	19.09.2022	Sen	19.09.2022	KS	
Distribution:				File:		

MESSTEC F			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 2/71

Index

1. Introduction	
2. First steps – Getting started	
3. TEC-Controller	7
4. The Setup – General Instructions	10
4.1. Mechanical Setup	10
4.2. Electrical Setup for Control and Monitoring	12
5. Temperature sensor	19
5.1. Platinum Sensor	19
5.2. Arbitrary Sensor	
5.3. Sensor Current	
6. Indicator elements	23
6.1. Indication of operating states	23
6.1.1. Indicator LEDs	23
6.1.2. Booting sequence	24
6.1.3. Safe-State during configuration of digital Inputs/Outputs	25
6.2. Indication of serial data transfer	25
6.3. Monitoring of supply voltages	26
7. Wiring and connectors	27
7.1. Hookup groups	27
7.2. Connectors and signals	
7.2.1. Supply Voltage X5	
7.2.2. Peltier element X6	31
7.2.3. Control Signals Digital X2	32
7.2.4. Control Signals Analog X1	35
7.2.5. Wiring examples for the analog input CA-SETPOINT	
7.2.5.1. Internal Potentiometer	
7.2.5.2. External Potentiometer with reference voltage	
7.2.5.3. Voltage Controller	
7.2.6. Temperature Sensor X4	
7.2.7. USB/RS232	41

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 3/71
8. Configuration in Detail			
-			
•	dary Mode: Clipping		
-	dary Mode: Slope Tra		
8.2. Digital Inputs and Ou	utputs		48
8.2.1. Inputs			48
8.2.2. Outputs			49
9. Error states			50
9.1. SENSOR Error			50
9.2. OVERTEMPERATUR	E Error		51
9.3. SHORTCIRCUIT Erro	۲		51
10. PC Software: TEC Con	trol		52
10.1. Main menu			52
10.2. Configuration			58
10.2.1. Temperature li	imits		59
10.2.2. Current limit			60
10.2.3. Voltage limit			60
10.2.4. Boundary Mod	le		61
10.2.5. Sensor selecti	on		61
10.2.6. Control param	eter		62
10.2.7. Enable Mode .			63
10.2.8. Setpoint Mode)		63
10.2.9. Output Stage I	Node		63
10.2.10. Colours + Firm	ware Version		64
10.2.11. Language			65
10.2.12. IO Configuration	on		65
10.3. USB Driver			68
11. Drawings			69
11.1. Mechanical Drawings .			
11.2. Mounting Positions			70
12. TEC-Controller family.			71

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 4/71

1. Introduction

The TEC-Controller (Thermo Electric Cooler) is a temperature controller with high accuracy. This controller is combined with appropriate power electronics of high efficiency to feed Peltier Elements.

TEC-Controllers up to 50V from MPC are available in 4 output current ranges:

- up to 3A output current
- up to 6A output current
- up to 12A output current
- up to 24A output current

Note: In this document only the TEC-Controller up to 3A in the "Wide Range" version with extended temperature range from -100°C ... +200°C is described.

The TEC-Controller 3A is a newly developed, small module with very high power density due to state of the art power stages in GaN technology.

TEC-Controllers from MPC can be operated in various modes:

- Hardware only
- Software only
- combination of hardware and software control

TEC-Controllers from MPC are standalone. Fig. 1 shows a minimal system.

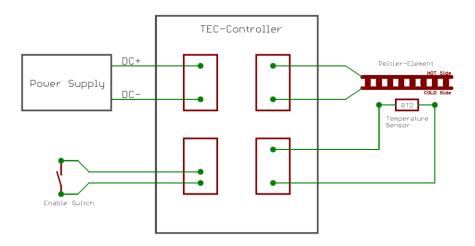


Fig. 1: Minimal TEC-Controller System

For a straightforward minimal system, beyond the mechanical setup a power supply, the Peltier Element(s), the temperature sensor and an enable switch are needed.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 5/71

There is a PC-Software available which provides access to comprehensive configuration, control and live monitoring menus.

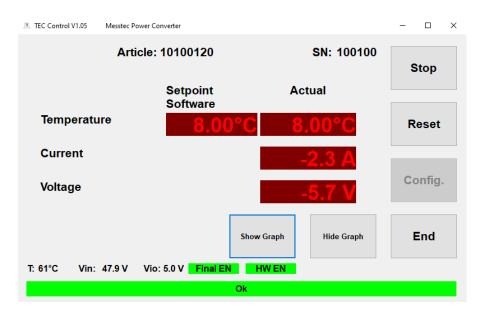


Fig. 2: PC-Software

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 6/71

2. First steps – Getting started

- Take care of correct supply voltage wiring (X5). The TEC-Controller has no inverse polarity protection. Wrong polarity may damage the unit and will void the warranty.
- Take care of short supply voltage wiring (X5). Long cables or routing along electromagnetic interference sources will lead to instability and unreliable operating behavior.
- Do not operate a Peltier element in the range of its maximum power limit or cooling capacity. This will fail due to high power loss and bad efficiency.
- It is recommended to select a Peltier element whose cooling capacity is sufficient at an operating voltage (current) of one quarter to half of the maximum operating voltage (current).
- Orientation of the Peltier Element in the mechanical setup: COLD side towards diode or heat spreader and temperature sensor HOT side towards heatsink

MESSTEC F			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 7/71

3. TEC-Controller

In the following, main functions are explained on the basis of the block diagram Fig. 3.

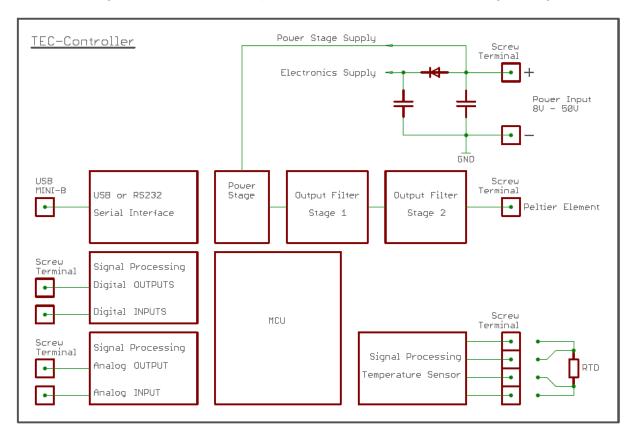


Fig. 3: Block diagram

All connections to the TEC-Controller, except the serial interface, are realized by similar and easy to use screw terminals. For easy cabling no special connectors are necessary, special tools are not required.

The power input terminal accepts voltages between 8 VDC and 50 VDC. The power supply should have stabilized voltage outputs. Make sure, the wiring is short and has correct polarity.

With high efficiency, the input voltage is processed by the power stage, according to the digital temperature controller. After extensive filtering in two stages the resulting voltage is applied to the terminal for the Peltier element. The Peltier element is driven by a DC signal. The current ripple is below 1%. The power stage is protected by a short circuit detector, which is implemented in hardware (no software latency).

Supplementary detailed information:

Based on the physical characteristics, every Peltier element has fundamental limitations on the maximum temperature difference it can create between its cold and hot side. The ability to create this maximum temperature difference is quite substantially affected by the amount of ripple current that flows through the Peltier element, relative to the DC current.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 8/71

This is the reason, MPC TEC-Controllers are designed for uncompromising low output current ripple, even though this is associated with higher complexity. The result is clear: Full performance of the Peltier element due to unconstrained maximum temperature difference operation. The resulting cooling system setup has therefore high efficiency and is cost effective.

PWM based TEC-Controllers are small and on its own, may have slightly higher efficiency. However the performance of the Peltier element operated in this way is really bad. In the best case, the Peltier element can create a maximum temperature difference of 50% compared to DC operation. Usually it is even less. Therefore it is required to provide larger Peltier elements, a larger power supply and larger heatsink and blower equipment. The resulting cooling system setup has therefore low efficiency and on the whole is not cost effective at all.

Signal processing for the temperature sensor is optimized for RTD (Resistance Temperature Detector) sensors. RTDs are passive devices as, Platinum, Nickel, NTC or Silicone sensors. In any case, active or integrated circuit sensors are not appropriate. Two and four wire connection is possible. Use four wire cabling with shield for high precision demands. The type of sensor can be selected conveniently by PC-Software. It is also possible to define an application specific RTD sensor.

The design of the sensor signal processing circuit ensures very high precision and virtually no drift errors. There is no need for calibration. Signal processing for the temperature sensor has open-sensor and short-circuit detection. In either case, the TEC-Controller goes into error mode and will be disabled.

For the TEC-Controller operation, there are 4 sorts of control signals and corresponding signal processing available:

- analog input, with associated reference voltage output (5 V)
- analog output
- digital input
- digital output

There is one analog input available to specify the HW-setpoint. Dependent on the actual configuration (PC-software), the temperature setpoint can be determined by an analog control voltage (0 V to 5 V) attached to the HW-setpoint input. With default settings, the analog control voltage results in a temperature setpoint of -100 °C to 200°C, i.e. 1,5 V input voltage creates a temperature setpoint of -10 °C. The analog control voltage can be externally generated and made available in various ways. For easy operation with minimal wiring effort, there is also an internal potentiometer available. The analog input for the HW-setpoint can be configured extensively (see: Configuration in Detail).

Depending on the actual configuration, the temperature setpoint can also be adjusted directly in the GUI of the PC-software. Then no wiring of the analog HW-setpoint input is necessary at all.

Note: Highest control accuracy will be achieved in the SW SETPOINT MODE.

There is one analog output available, which gives a linear voltage from 0 V to 5 V in proportion to the actual temperature (i.e. 1,6 V corresponds to -4° C).

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 9/71

There are two digital inputs available: HW-ENABLE and HW-RESET. Both digital inputs can be independently configured (PC-software) as low- or high-active. Default setting is low-active. With the input HW-ENABLE activated, the TEC-Controller's power stage and closed loop temperature regulation is activated. With the input HW-RESET, internal error states of the TEC-Controller can be cleared. This is not a reset signal of the built in MCU (Micro Controller Unit).

There are two digital outputs available: READY and STATUS. Both digital outputs can be independently configured (PC-software) as low- or high-active, furthermore as totem-pole or open-collector outputs (default settings: high-active and totem-pole). The digital output READY indicates operational readiness (after power on). When internal errors are occuring, the READY output will be deactivated. The digital output STATUS will be activated, when the TEC-Controller is enabled and if the sensor temperature is within +/- 1 °C of the setpoint value.

The serial interface is carried out by standard USB 2.0 Mini-B connector. TEC-Controllers are available in two different hardware versions: with USB-Interface or with RS232 Interface. Both interface types are operating with the Mini-B connector.

PCs with USB interface are connected via standard USB cable. PCs or arbitrary controllers with RS232 interface are connected through an adapter cable Mini-B / SubD9F. This adapter cable has standard pinning on the SubD9F connector and is available on request (see chapter 7.3.7).

In any case, the serial protocol is identical. The protocol specification is available on request as a separate document.

MESSTEC P			
Ope TEC Contr	(mpc		
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 10/71

4. The Setup – General Instructions

4.1. Mechanical Setup

Fig. 4 shows a general setup of a laser diode system and its appropriate cooling equipment. Here, just the mere schematic mechanical setup is drafted.

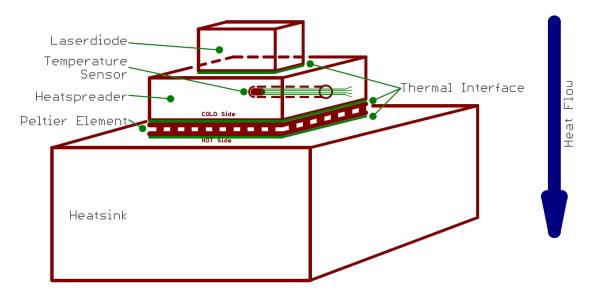


Fig. 4: General Setup

The general setup consists of:

- laser diode
- Heatspreader with integrated temperature sensor
- Peltier Element
- Heatsink

The laser diode as the heat source in this setup has to be mounted on an appropriate heatspreader. The heatspreader (also called cooling plate) is a solid block, made of copper or aluminum.

Usually the base area of the heatspreader is larger than that of the Peltier Element because of the required mounting holes. The temperature sensor is positioned inside the heatspreader. For this purpose an appropriate hole or notch has to be machined into the heatspreader directly below the laser diode. Make sure, the temperature sensor is properly fixed and has best thermal contact (use gap-filler or thermally conductive glue). Use a temperature sensor with small thermal mass.

Note: Design and workmanship of the heatspreader and the location of the temperature sensor in the heatspreader has great impact on the final quality and stability of the closed loop control of the temperature.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 11/71

The Peltier Element is located in between the heatspreader and the heatsink.

Note: It is absolutely essential, the cold side of the Peltier Element is aligned towards the heatspreader and the hot side is aligned towards the heatsink. Wrong assembly will yield in total malfunction and instability of the system, and may further damage your setup.

Finally, with its hot side, the Peltier Element is mounted to the heatsink. Make sure the heatsink is designed large enough to well dissipate all the heat produced in the system setup.

Pay attention that all joints within the heat flow feature lowest possible heat resistance. Use adequate thermal interface materials like gap-filler, thermal compounds or thermal conductive foil.

MESSTEC Power Converter GmbH

Operating Manual TEC Controller 3A Wide Range

Document:	10100160OM
Document.	10100100000

Revision: 1.0

Date: 19.09.2022

4.2. Electrical Setup for Control and Monitoring

In the following some generic wiring examples are shown.

The power supply, Peltier element and temperature sensor are wired in the same way in all examples.

An Enable switch is wired to the HW ENABLE input in all examples. This is due to the fact, that even if the ENABLE Mode is set to SW (PC-Software), it is still necessary to activate the HW ENABLE input for safety reasons (see "Control Signals Digital X2"). It is not recommended, to replace the switch by a wire bridge.

A Reset switch is wired to the RESET input in all examples. In normal operation this switch is namely not necessary. But in case of failure, the Reset switch is essential to be able to clear errors and subsequently continue operation. Alternatively, if the TEC-Controller is operated by PC-Software, there is also a Reset button available in the GUI.

In the following, some sample applications are shown:

Fig. 5

The internal setpoint potentiometer is applied. Therefore a simple wire bridge must be installed.

Fig. 6

An external setpoint potentiometer is installed. Please also note chapter "Wiring examples for the analog input CA-SETPOINT".

Fig. 7

The HW ENABLE input is set to High-active in the IO-configuration (PC-Software). Therefore, the Enable switch is wired to +5V REFERENCE. In any case, a pullup or rather pulldown resistor is not necessary.

Fig. 8

The SETPOINT MODE is set to SW (software). Now, the temperature setpoint is adjusted in the GUI of the PC-Software. Wiring of the HW SETPOINT input can be omitted completely.

Fig. 9

The output signals READY and STATUS are wired to external LEDs.

Fig. 10

The output signals READY and STATUS are wired to external relays. They are powered by a separate power supply. Make sure, the outputs are configured to OC (open collector) in this case. Output sink current is max. 500 mA in OC mode.

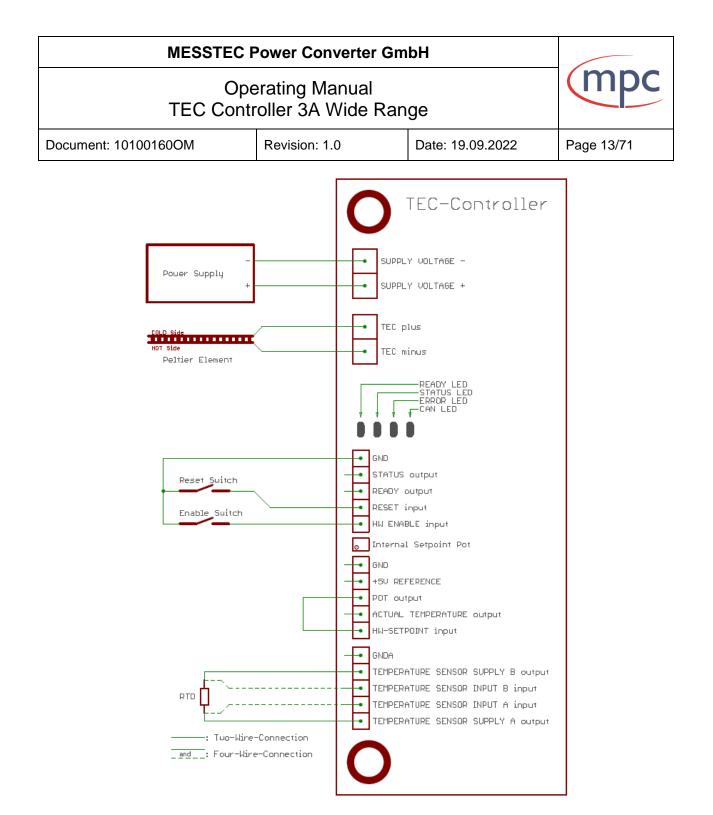


Fig. 5: Wiring example with internal setpoint potentiometer

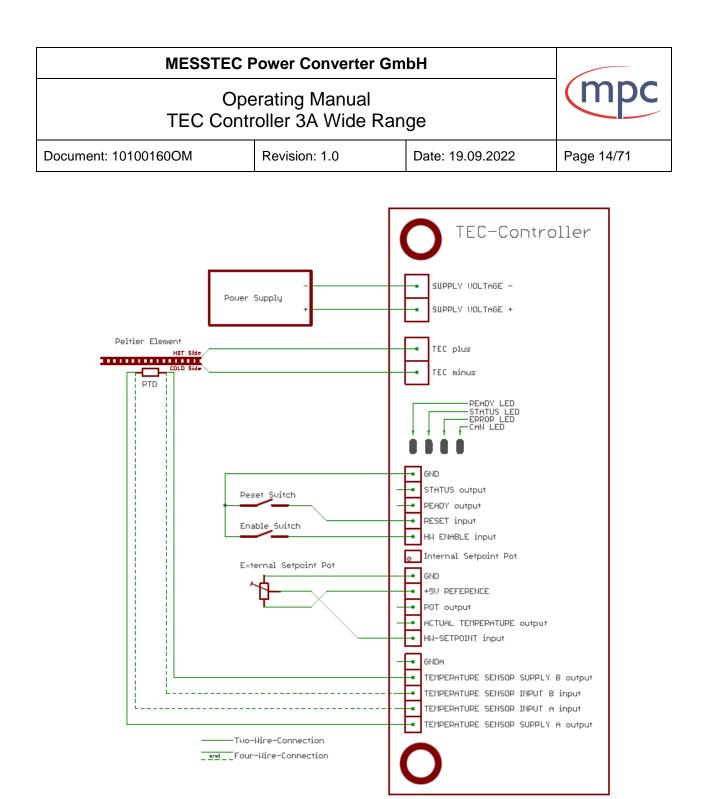


Fig. 6: Wiring example with external setpoint potentiometer

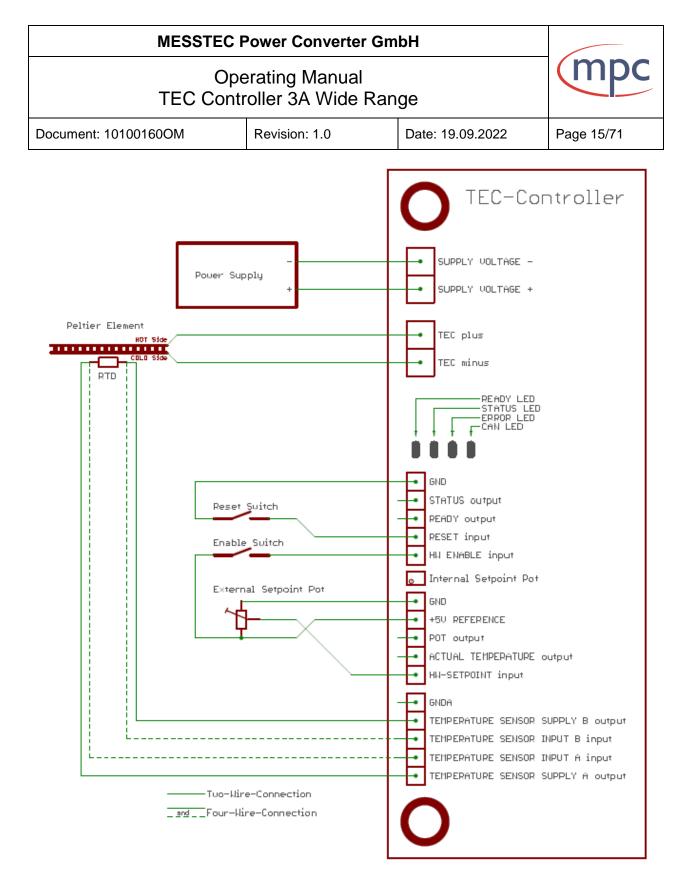


Fig. 7: Wiring example: HW ENABLE input is high active

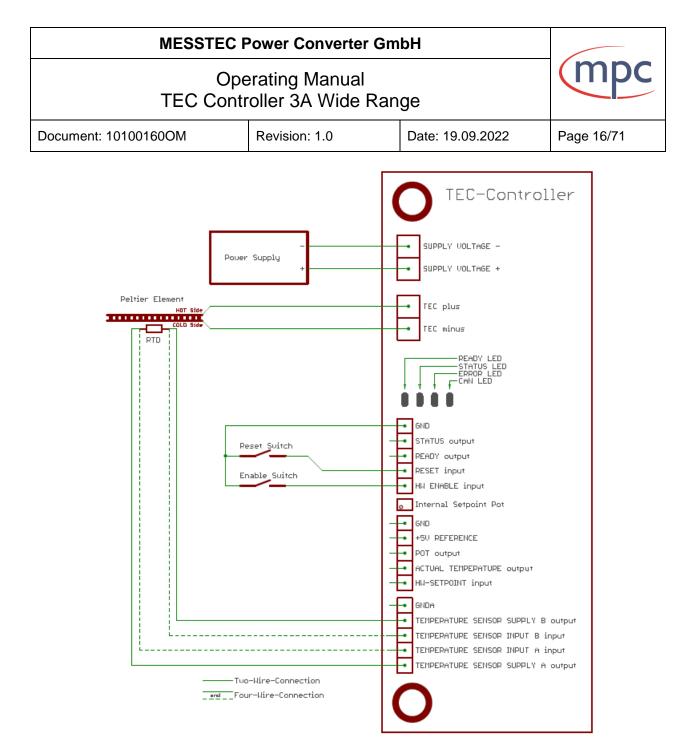


Fig. 8: Wiring example: setpoint mode via Control Software

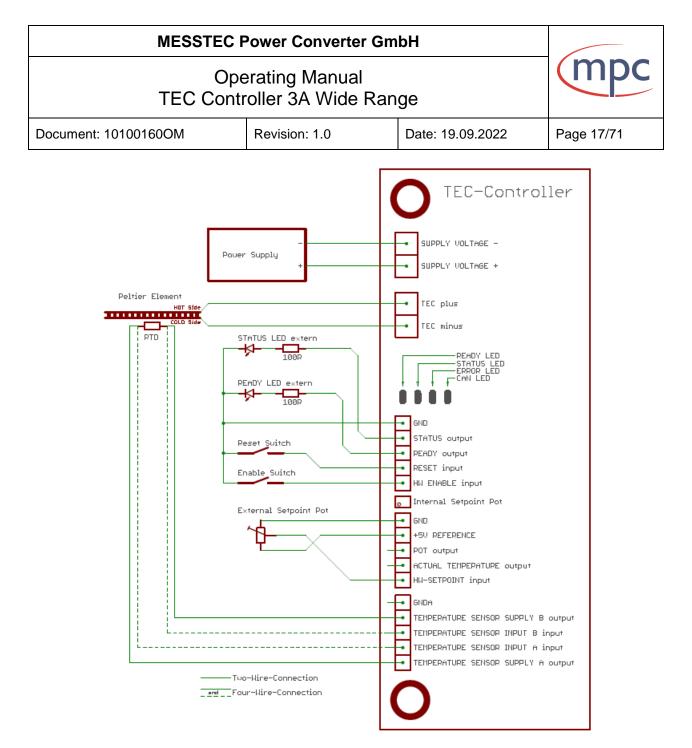


Fig. 9: Wiring example: external READY and STATUS LEDs

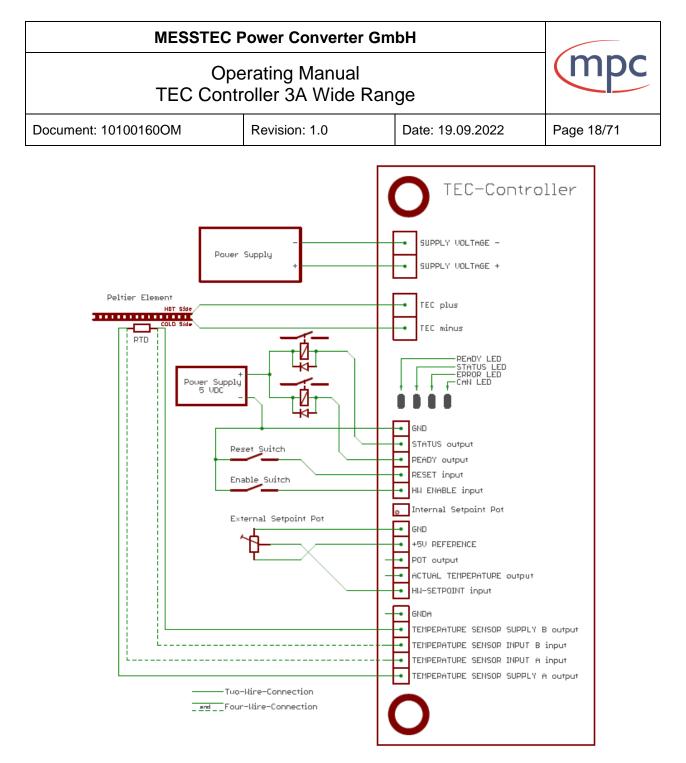


Fig. 10: Wiring example: external READY and STATUS relays

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 19/71

5. Temperature sensor

The TEC-Controller has a very accurate and progressive sensor signal processing unit onboard. This signal processing unit is able to accept RTD temperature sensors of almost any technology. Sensor interface wiring can be realized in a 2-wire or 4-wire system.

Note: For highest demands in temperature accuracy it is recommended to consider an appropriate Pt1000 sensor in a 4-wire system.

For wiring details please see chapter "Wiring and connectors / Temperature Sensor X4".

The type of sensor applied in the setup can be configured by means of PC-Software.

Note: The default sensor type is Pt1000.

5.1. Platinum Sensor

In the PC-Software Pt1000 and Pt100 Sensors are available. It is not necessary to enter any coefficients, just press the button for the sensor in your application (see Fig. 11 below).



Fig. 11: Platinum sensor selection

Supplementary detailed information:

Platinum Sensors have a characteristic curve according to:

$$R(\vartheta) = R_{\vartheta 0} * (1 + a * (\vartheta - \vartheta_0) + b * (\vartheta - \vartheta_0)^2)$$

a = 3,9083 * 10⁻³ * °C⁻¹ b = -5,775 * 10⁻⁷ * °C⁻²

θ: Temperature in °C

 ϑ_0 : Reference temperature in °C ($\vartheta_0 = 0$ °C for Platinum)

 R_{90} : Reference resistor value in Ω (Pt1000: R_{90} = 1000 Ω)

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 20/71

5.2. Arbitrary Sensor

Almost any arbitrary temperature sensor can be used in specific applications.

Note: The temperature sensor interface and signal processing is designed for RTD (Resistance Temperature Detector) sensors. Do not use active or integrated circuit temperature sensors in any case!

Arbitrary sensors are specified via polynomial of 6th degree. The characteristic curve is according to:

$$\begin{split} R(\vartheta) &= R_{\vartheta 0} * (1 + a_1 * (\vartheta - \vartheta_0) + a_2 * (\vartheta - \vartheta_0)^2 + a_3 * (\vartheta - \vartheta_0)^3 + a_4 * (\vartheta - \vartheta_0)^4 + \\ &+ a_5 * (\vartheta - \vartheta_0)^5 + a_6 * (\vartheta - \vartheta_0)^6) \end{split}$$

 $\begin{array}{lll} a_1 = coefficient \ 1^{st} \ order; & unit: \ ^{\circ}C^{-1} \\ a_2 = coefficient \ 2^{nd} \ order; & unit: \ ^{\circ}C^{-2} \\ a_3 = coefficient \ 3^{rd} \ order; & unit: \ ^{\circ}C^{-3} \\ a_4 = coefficient \ 4^{th} \ order; & unit: \ ^{\circ}C^{-4} \\ a_5 = coefficient \ 5^{th} \ order; & unit: \ ^{\circ}C^{-5} \\ a_6 = coefficient \ 6^{th} \ order; & unit: \ ^{\circ}C^{-6} \end{array}$

θ: Temperature in °C

 ϑ_0 : Reference temperature in °C

R₉₀: Reference resistor value in Ω (R₉₀ = R(ϑ) at ϑ_0)

The configuration of arbitrary sensors allows a high degree of variety. Not all values and combinations are really reasonable.

Make sure to consider the following notes:

- The result of the polynomial always must be positive in the range 0 °C to 50 °C.
- The curve shape of the polynomial must be always strictly monotonic decreasing or increasing.
- The result of the polynomial should be located in a range 100 Ω to 5 k Ω .

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 21/71

In the PC-Software the arbitrary sensor can be configured according to Fig. 12 and Fig. 13. To select a coefficient, click on the value (right side) of a coefficient.

The default setting corresponds to the sensor Pt1000.

Messtec Power Converter		$ \Box$ $>$	
Set Sensor Parameter	Article: 10100160	SN: 100100	1
Rref	Tref		
		A1 3,9083E-03 A2 -5,7750E-07 A3 0,0000E+00 A4 0,0000E+00 A5 0,0000E+00 A6 0,0000E+00	
Cancel		Ok	

Fig. 12: Arbitrary sensor definition page 1

TEC Control V2.06	Messtec Power Converter		- 🗆 ×
		Article: 1010016	50 SN: 100100
1600 1400 1200 1000 800 -100 -80 -60 -40	-20 0 20 40 60 90 100 120 140 160 180	A1 A2 A3 A4 A5 A6	3,9083E-03 -5,7750E-07 0,0000E+00 0,0000E+00 0,0000E+00 0,0000E+00
A1	+3.908	3E-03	3
Cancel	+/- A A A A	× ▲ / ▼ +/- ▼ 、	A Ok

Fig. 13: Arbitrary sensor definition page 2

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 22/71

5.3. Sensor Current

The current source for the temperature sensor is adjustable between 100 μA and 4 mA. Default setting is 1 mA.

Note: For almost all sensors, the default setting fits very well. It is therefore not necessary to alter the sensor current. In seldom cases, especially with specific sensors (see chapter Arbitrary Sensor) it may be necessary to alter the sensor current to optimize the measurement results.

Supplementary detailed information:

The current through the temperature sensor is always the result of a reasonable compromise. Conflicting requirements are:

- Maximized sensor output signal hence optimized resolution
- Minimized sensor power hence self-heating
- Sensor signal processing has upper and lower limits

It is a common rule of thumb, to limit the load of the sensor to <u>1 mW</u>. With this value selfheating of the sensor device is acceptable low and the sensor output signal is high enough for precision signal processing.

Sensor signal processing limits are:

- U_{MIN}: 0,08 V
- U_{MAX}: 2,30 V

Sensor voltages below U_{MIN} are considered as short-circuit in the sensor circuit. Sensor voltages above U_{MAX} are considered as broken wire in the sensor circuit. A sensor error is released in both cases.

For the sensor current we have:

$$I_{SENSOR MAX} = \sqrt{\frac{P_{SENSOR MAX}}{R_{SENSOR}}}$$

and

$$U_{SENSOR} = R_{SENSOR} * I_{SENSOR}$$

Example:

What is the current value for a Pt1000 sensor, when the power dissipation is supposed to be 1 mW?

$$I_{SENSOR} = \sqrt{\frac{0,001 W}{1000 \Omega}} = 1 mA$$

$$U_{SENSOR} = 1000 \ \Omega * 1 \ mA = 1,0 \ V$$

Result:

The proposed sensor current is 1 mA.

The sensor voltage is 1 V. This is very well between the two limits U_{MAX} and U_{MIN}.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 23/71

6. Indicator elements

There are 3 different groups of LED indicators:

- Indication of operating states •
- Indication of serial data transfer •
- Monitoring of supply voltages •

6.1. Indication of operating states

6.1.1. Indicator LEDs

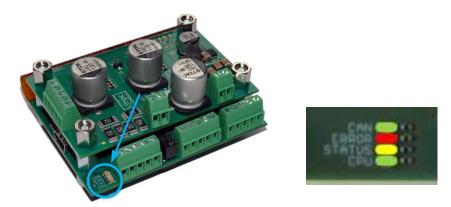


Fig. 14: Operating states indicator LEDs



Currently not used.



Indication of error states.

- LED Off:
- LED one flash:
- LED two flashes:
- •

no error Sensor error (short circuit or open sensor wiring) Output current too high (external short circuit) internal over temperature of power stage

LED three flashes:

Description of error states see chapter: Error States.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Page 24/71		

STATUS LED

Indication temperature controller.

LED Off:	TEC-Controller is disabled. ENABLE not active.
LED On:	TEC-Controller is enabled
	AND
	temperature is within +/- 1 °C of the setpoint value
LED one flash:	TEC-Controller is enabled
	AND
	temperature is below setpoint (too cold).
LED two flashes:	TEC-Controller is enabled
	AND
	temperature is above setpoint (too hot).
	LED On:

CPU LED

After power up and the booting sequence, this LED is blinking periodically, indicating the processor is working properly. The TEC-Controller is operating normally.

Note: If this LED shows different behavior, the TEC-Controller is not operating normally. Do NOT enable the TEC-Controller in this case.

6.1.2. Booting sequence

After power up the processor runs through a booting sequence. During this sequence, the internal and external hardware is entirely configured and put into full operation.

This sequence is accompanied by a LED test sequence, which behaves like a traffic light. These LEDs are switched on and off sequentially:



After this sequence, the TEC-Controller is in normal operation.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Page 25/71		

6.1.3. Safe-State during configuration of digital Inputs/Outputs

The Safe-State is indicated by simultaneously and periodically blinking of three LEDs:



The Safe-State can be left only by switching off the power supply of the TEC-Controller.

6.2. Indication of serial data transfer

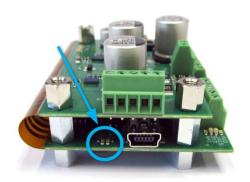




Fig. 15: Serial data transfer indicator LEDs

During serial data transfer (USB or RS232) to PC or external controller, these LEDs are flashing accordingly.

- RXD flashing: data is being received •
 - TXD flashing: data is being transmitted

While connected to the PC-Software, both LEDs are flashing periodically.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Page 26/71		

6.3. Monitoring of supply voltages

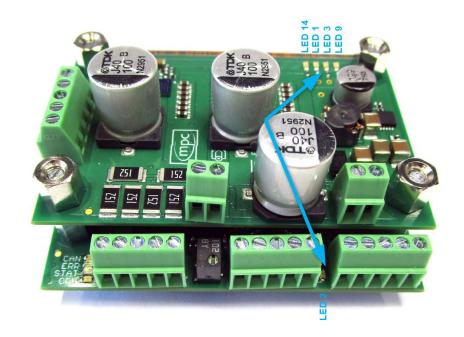


Fig. 16: Supply voltage monitor LEDs

These LEDs provide simple means for monitoring internal supply voltages. In any case, all LEDs must be constantly ON.

- LED 1: +5 V sensor signal processing
- LED 2: +5 V i/o reference voltage
- LED 3: +3,3 V
- LED 9: +5 V
- LED 14: +6 V
- Note: LED 2 monitors the reference voltage for the HW-SETPOINT. If this LED is Off, double check the wiring of the external setpoint potentiometer. The reference voltage may be short circuit.

MESSTEC Power Converter GmbH

Operating Manual TEC Controller 3A Wide Range

mpc
Page 27/71

Document: 10100160OM

7. Wiring and connectors

7.1. Hookup groups

Three groups of hookups are available to operate the TEC-Controller:

- Power (small screw-type connectors)
- Control and temperature sensor (small screw-type connectors)
- PC interface (USB 2.0 Mini-B connector)


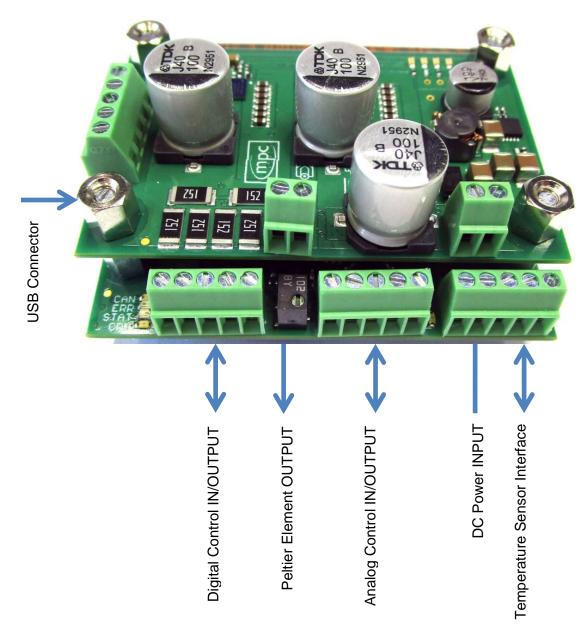


Fig. 17: Hookup groups

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM	Page 28/71		


7.2. Connectors and signals

Lower Board:

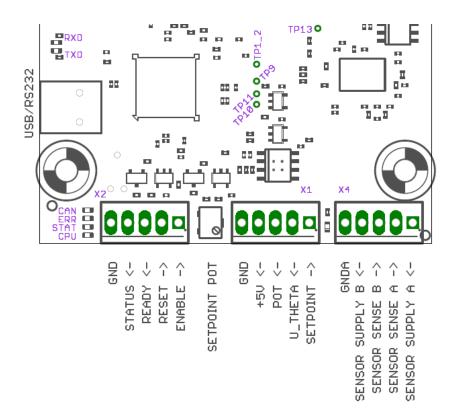

Connectors (lower board)

X2	5-pole single row screw terminal. Control signals digital.
X1	5-pole single row screw terminal. Control signals analog.
X4	5-pole single row screw terminal. Temperature sensor.
USB/RS232	USB 2.0 Mini-B connector

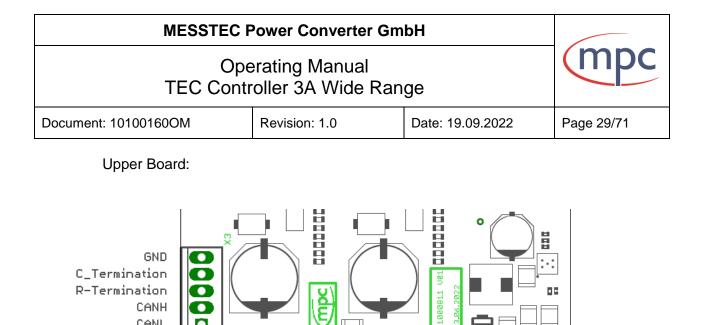

9X

V $\stackrel{|}{\lor}$

I +

Peltier Peltier C

SUPPLY GND ->

î

suppLY +

CANH

CANL

•

С

Connectors (upper board)

- 2-pole single row screw terminal. Input for supply voltage. Χ5
- X6 2-pole single row screw terminal. Output to Peltier Element.
- Х3 5-pole single row screw terminal. CAN interface

MESSTEC	C Power Converter	GmbH	
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 30/71

7.2.1. Supply Voltage X5

Pin	Name	Function
1	SV+	Supply voltage plus
2	GND	Power GND (supply voltage minus)

SV+ (X5-1) Supply voltage plus Supply voltage: Supply current:

8.0 V ... 48.0 V (max. 50 V) depends on the output load (max. ~3,5A)

There are no internal fuses. The supply voltage has to be fused external. Supply voltage should be approx. 10% above maximum Peltier voltage. Make sure that the supply wiring (SV+ and GND) is as short as possible.

Warning: There is no inverse polarity protection for the supply voltage. Wrong polarity may damage the device substantially. This will void the warranty.

GND (X5-2)

Power GND related to SV+. Connect to supply voltage minus.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM	Page 31/71		

7.2.2. Peltier element X6

Pin	Name	Function
1	TECplus	Power output to Peltier element plus
2	TECminus	Power output to Peltier element minus

TECplus (X6-1)

Connection to Peltier element plus. Voltage: 0 V ... Supply voltage

This output pin has to be connected to the plus pin of the Peltier element. It does <u>not</u> mean, that there is a positive voltage related to the output pin **TECminus**. The polarity on this outputs is dependent exclusively on the temperature control situation and is not related to GND.

Warning: Do not connect to GND or any other electrical potential.

TECminus (X6-2)

Connection to Peltier element minus. Voltage: 0 V ... Supply voltage

This output pin has to be connected to the minus pin of the Peltier element. It does <u>not</u> mean, that there is a negative voltage related to the output pin **TECplus**. The polarity on this outputs is dependent exclusively on the temperature control situation and is not related to GND

Warning: Do not connect to GND or any other electrical potential.

Warning: Make sure, TECminus and TECplus are not mixed up. If so, the controller will never come into regulation and will be unstable. This can lead to sudden shock and damage of your setup.

The power outputs to the Peltier element are short circuit protected. The short circuit detector is implemented in hardware and therefore reacting fast (no software latency).

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Page 32/71		

7.2.3. Control Signals Digital X2

Digital control signals can be configured in a comprehensive way. The PC-Software offers easy access to configuration of inputs and outputs. Initially, the signal description is based on default configuration. Subsequently, alternative configurations will be presented and explained.

Pin	Name	Function
1	CD-ENABLE	HW-ENABLE input, low-active (default configuration)
2	CD-RESET	HW-RESET input, low-active (default configuration)
3	CD-READY	Output, high-active (default configuration)
4	CD-STATUS	Output, high-active (default configuration)
5	GND	Signal GND

CD-ENABLE – Input (X2-1)

Control Digital – HW-ENABLE (Hardware-Enable) Input resistance: 10 k Ω (pullup) Digital TTL (5 V) input. High if left open. Default configuration: low active

A low-signal or pulling HW-ENABLE to GND will start the temperature controller and the output-power-stage. The TEC-Controller is then fully activated and starts temperature regulation.

For safety reasons this signal is essential in any case. Even if the Enable-Mode is set to Software by PC-Software, in this case the HW-ENABLE and the software START-Button have to be activated. Only then, the Final-ENABLE will be set active and start the TEC-Controller in this case.

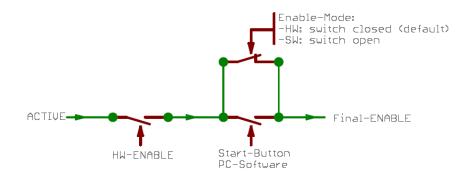


Fig. 18: internal ENABLE signal chain

Fig. 18 shows the internal logic of the ENABLE signal chain represented as an electric circuit.

If the Enable-Mode is set to HW, the logic of the Start-Button is bypassed (Enable-Mode switch closed). Consequence: just the HW-ENABLE activates the Final-ENABLE.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Page 33/71		

If the Enable-Mode is set to SW, the logic of the Start-Button is not bypassed (Enable-Mode switch open). Consequence: HW-ENABLE <u>and</u> Start-Button only together are activating the Final-ENABLE.

CD-RESET – Input (X2-2)

Control Digital – HW-RESET (Hardware-Reset) Input resistance: 10 k Ω (pullup) Digital TTL (5 V) input. High if left open. Default configuration: low active

With HW-RESET internal error states can be cleared (see Error states).

Note: The HW-RESET input is not a reset line for the MCU.

CD-READY – Output (X2-3)

Control Digital – READY Output resistance: 330 Ω Digital TTL (5 V) output. Default configuration: high active

The output signal READY indicates that the TEC-Controller is working normally and that there are no error states.

READY = inactive:

- after power on: TEC-Controller is booting. Internal peripherals are put into operation.
- An error is present (i.e. broken temperature sensor).

READY = active:

• TEC-Controller is in normal working condition. No errors present.

MESSTEC Power Converter GmbH

Operating Manual TEC Controller 3A Wide Range

Document: 10100160OM

Revision: 1.0

Date: 19.09.2022

Page 34/71

CD-STATUS – Output (X2-4)

Control Digital – STATUS Output resistance: 330 Ω Digital TTL (5 V) output. Default configuration: high active

STATUS = inactive:

• TEC-Controller is disabled OR sensor temperature is outside +/- 1 °C of the setpoint value.

STATUS = active:

• TEC-Controller is enabled AND sensor temperature is within +/- 1 °C of the setpoint value.

GND – (X2-5)

Signal GND Reference potential for CD signals.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Page 35/71		

7.2.4. Control Signals Analog X1

Pin	Name	Function
1	CA-SETPOINT	HW-SETPOINT input
2	CA-U-THETA	ACTUAL TEMPERATURE output
3	CA-POT	Output of built in potentiometer (1 k Ω)
4	REFERENCE +5V	Reference voltage output
5	GND	Signal GND

CA-SETPOINT - Input (X1-1)

Control Analog – HW-SETPOINT (Hardware-Setpoint) Input resistance: 10 k Ω

The voltage feed into this input sets the hardware-setpoint of the temperature controller.

Voltage sources for this purpose are:

- + Internal potentiometer
- + External potentiometer

+ Voltage controller

Wiring examples see below.

Note: The HW-SW-SETPOINT-MODE has to be set to HW by means of the PC Software. This is the default mode.

The target temperature (in °C) is proportional to the voltage according to the following relationship:

$$\vartheta = U_{X1-1} * 60 - 100$$

or:

$$U_{X1-1} = \frac{\vartheta + 100}{60}$$

Example:

0,00 V => -100 °C 0,83 V => -50 °C 1,67 V => 0 °C 2,50 V => +50 °C 3,33 V => +100 °C 4,16 V => +150 °C 5,00 V => +200 °C

Note: This is true only for the default settings. For further characteristics see: Configuration in detail – HW-Setpoint

MESSTEC Power Converter GmbH Operating Manual TEC Controller 3A Wide Range Document: 101001600M Revision: 1.0 Date: 19.09.2022 Page 36/71

CA-U-THETA – Output (X1-2)

Control Analog – ACTUAL TEMPERATURE Output resistance: 100 Ω

The voltage on this output is proportional to the actual sensor temperature in °C.

Relationship:

$$\vartheta = U_{X1-2} * 60 - 100$$

or:

 $U_{X1-2}=\frac{\vartheta+100}{60}$

Example:

0,00 V => -100 °C 0,83 V => -50 °C 1,67 V => 0 °C 2,50 V => +50 °C 3,33 V => +100 °C 4,16 V => +150 °C 5,00 V => +200 °C

CA-POT – Output (X1-3)

Control Analog – Output of built in setpoint potentiometer Output resistance: 1 $k\Omega$

REFERENCE +5V – Output (X1-4)

Control Analog – Output of reference voltage +5 V Output current: $I_{max} = 100 \text{mA}$

GND – (X1-5) Signal GND

Reference potential for CA signals.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 37/71

7.2.5. Wiring examples for the analog input CA-SETPOINT

Note: All signals, including GND must not be connected to any external potential.

7.2.5.1. Internal Potentiometer

For a fast and convenient setup, there is a potentiometer (10 turns) onboard. This potentiometer is already connected internally to the reference voltage and GND. The only external connection has to be made between CA-POT and CA-SETPOINT (see Fig. 19 below).

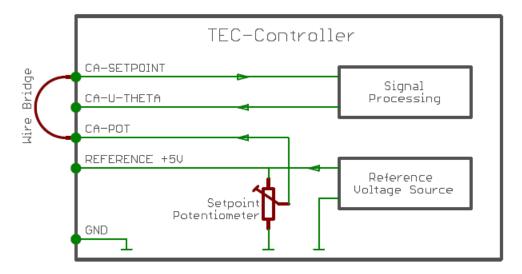


Fig. 19: Wiring of internal setpoint potentiometer

7.2.5.2. External Potentiometer with reference voltage

A simple way to control the HW-Setpoint from a remote position, is, to place a potentiometer (1k Ω , linear) in the setup. It is recommended to use a shielded cable. Make sure, the potentiometer is mounted electrically isolated.

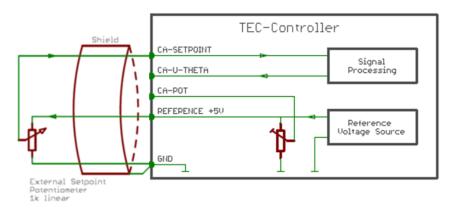


Fig. 20: Wiring of external setpoint potentiometer

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 38/71

7.2.5.3. Voltage Controller

An external voltage controller (i.e. Digital to Analog Converter) can be provided as HW-Setpoint source. Wiring is according to Fig. 21.

Specification of the voltage controller:

- + Output voltage: 0 V ... 5 V
- + Output impedance: 1 k Ω max.
- + Output must be galvanically isolated

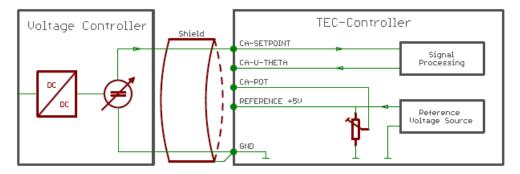


Fig. 21: Wiring external voltage controller

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 39/71

7.2.6. Temperature Sensor X4

The temperature sensor must be assembled galvanically isolated. Make strictly sure that there is no electrical connection to any other potential.

Note: The temperature sensor interface is designed for RTD (Resistance Temperature Detector) sensors. Do not use integrated circuit or active temperature sensors in any case!

If the RTD sensor is polarized, the higher potential leads of the sensor are wired to the A-pins of the interface.

Note: A potential difference on the sensor inputs below 0,08 V (short circuit) or above 2,35 V (open circuit) will release a SENSOR Error.

Pin	Name	Function
1	TS-SUPP-A	Temperature Sensor Supply A
2	TS-SENS-A	Temperature Sensor Input A
3	TS-SENS-B	Temperature Sensor Input B
4	TS-SUPP-B	Temperature Sensor Supply B
5	GNDA	Analog Signal GND

TS-SUPP-A (X4-1)

Temperature Sensor Supply A Current Source Contact A

Used for 4-wire and 2-wire sensor cabling.

TS-SENS-A – Input (X4-2)

Temperature Sensor Input A

Used for 4-wire sensor cabling.

TS-SENS-B – Input (X4-3)

Temperature Sensor Input B

Used for 4-wire sensor cabling.

TS-SUPP-B (X4-4)

Temperature Sensor Supply B Current Source Contact B

Used for 4-wire and 2-wire sensor cabling.

GNDA – (X4-5)

Analog Signal GND Shield of temperature sensor cabling (if required).

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		mpc	
Document: 10100160OM	Document: 10100160OM Revision: 1.0 Date: 19.09.2022		

4-Wire Sensor cabling

For high precision temperature measurements it is recommended, to apply 4-wire cabling of the temperature sensor. In addition, a shielded cable may be appropriate in case of significant EMI (Electromagnetic Interference).

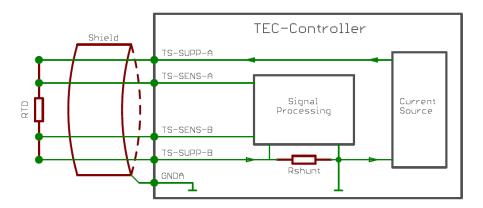


Fig. 22: Sensor cabling: 4-Wire

Note: Never mix up A and B pins. At the sensor end of the cable, signal TS-SUPP-A has to be combined only with TS-SENS-A. The same is true for the B signals of the interface.

2-Wire Sensor cabling

For temperature measurements with lower requirements, it may be adequate to apply 2-wire cabling of the temperature sensor. It is not necessary to externally short circuit the TS-SUPP and TS-SENS pins (A or B).

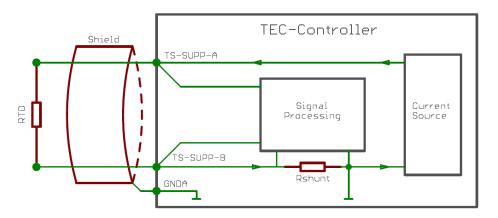


Fig. 23: Sensor cabling: 2-Wire

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		(mpc	
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 41/71

7.2.7. USB/RS232

MPC TEC-Controllers are available in two different interface hardware versions. One version is equipped with USB interface (mainly for interconnection to a PC). The other version is equipped with RS232 interface (interconnection to a PC, an external controller, PLD or MCU).

USB interface:

The TEC-Controller has a built in USB 2.0 Mini-B connector.

For connection use standard USB cable:

- Mini-B male to Standard-A male (ordering code 10385120)
- Mini-B male to Type-C male (ordering code 11385247)

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 42/71

RS232 interface:

Serial port settings:

Baud rate:	38400
Data length:	8 Bit
Parity:	none
Stop:	1 Bit
Flow control:	none

Use RS232 interface cable (USB Mini-B to SubD9F, see Fig. 24) available from MPC (ordering code 10385263).

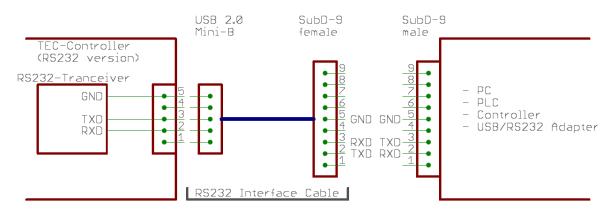


Fig. 24: RS232 interface cable

This interface cable can be connected directly to a RS232 port without using a Null-Modem cable.

Note: TEC-Controllers with RS232 interface are using the built in Mini-B connector as hardware connecting plug. In this case the MINI-B connector does not carry USB signals and should never be connected to the USB port of any PC. The USB port of the PC may be damaged.


MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 43/71


8. Configuration in Detail

8.1. HW Setpoint

The signal processing behavior of the input CA-SETPOINT can be configured in many ways to fit the best application setup. Following description applies to all possible wiring cases of this input (internal / external potentiometer, voltage source).

In any case, Fig. 25 shows the basic transfer function, with no minimum and maximum temperature set (default setting).

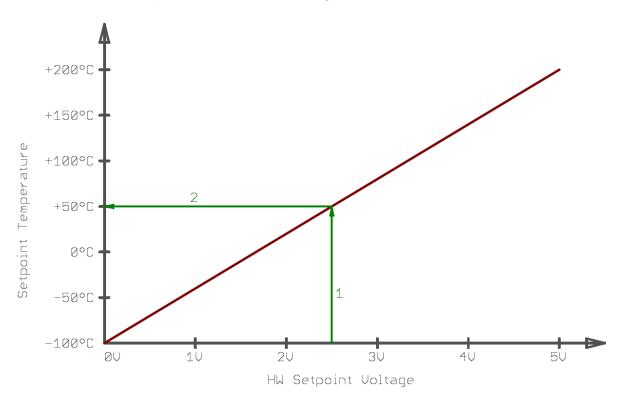

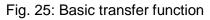

The red curve shows the relationship between HW-Setpoint-Voltage (input voltage) and the temperature setpoint. With default settings (minimum temperature: -100 °C, maximum temperature: +200 °C) the relationship is linear.

Example: A voltage of 2,5 V at the input CA-SETPOINT will lead to a setpoint temperature of 50 °C (see green arrows 1 and 2).

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		mpc	
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 44/71

Supplementary detailed information: The relationship between the setpoint temperature and the HW-Setpoint-Voltage is:

$$\vartheta = U_{HW-SETPOINT} * 60 - 100$$

and accordingly:

$$U_{HW-SETPOINT} = \frac{\vartheta + 100}{60}$$

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			mpc
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 45/71


By means of the PC-Software it is possible to set a maximum and a minimum temperature. Then it is necessary to distinguish between two different transfer modes:


- Clipping
- Slope Transformation

These modes are named "HW-Setpoint Boundary Mode" and can be set by PC-Software.

8.1.1. HW-Setpoint Boundary Mode: Clipping

In this mode, the relationship between the HW-Setpoint-Voltage and the temperature setpoint is not any longer linear for the whole range. Between min. and max. temperature the relationship is like in basic mode. Below min. and above max. temperature the transfer function is running horizontal (see solid red line in Fig. 26 below).

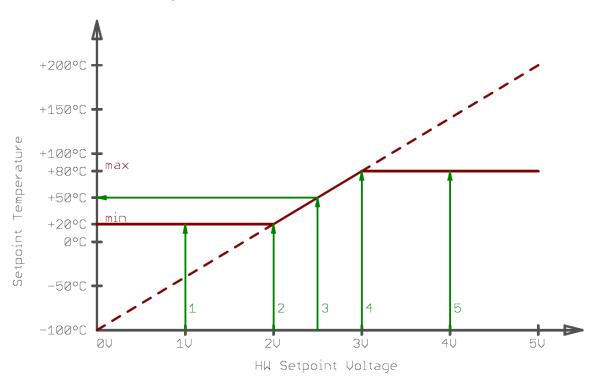

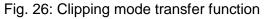

Example (see Fig. 26 above):

Supposed, min. temperature is set to 20 °C and max. temperature is set to 80 C by PC-Software then a HW-Setpoint-Voltage between 2 V and 3 V leads to a temperature setpoint between 20 °C and 80 °C (arrows 2, 3 and 4). HW-Setpoint-Voltages below 2 V will lead to 20 °C (arrow 1) and HW-Setpoint-Voltages above 3 V will lead to 80 °C (arrow 5).

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		(mpc	
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 46/71


For purpose of illustration, the basic transfer function is also shown in Fig. 26 (dashed red line). It is apparent, that in between the two temperature limits, the transfer function is conform to the basic transfer function. Below and above these limits, the transfer function is clipped to min. temperature and max. temperature respectively.


Advantage: The relationship between input voltage and temperature setpoint in between the temperature limits is always the same. (see basic transfer function).

Disadvantage: The usable adjustment range (potentiometer or voltage source) may get too tiny for practical purpose.

8.1.2. HW-Setpoint Boundary Mode: Slope Transformation

In this mode, the relationship between the HW-Setpoint-Voltage and the temperature setpoint is still linear but has a different slope than the basic transfer function. Now a HW-Setpoint-Voltage of 0 V leads to a setpoint of min. temperature and 5 V lead to a setpoint of max. temperature (see solid red line in Fig. 27 below). This means, the complete input voltage range is used.

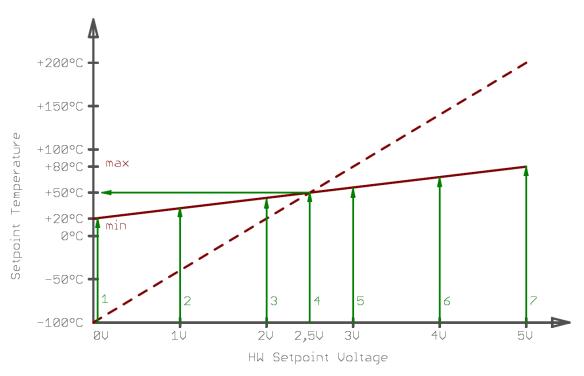

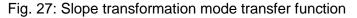

Example (see Fig. 27 above):

Supposed, min. temperature is set to 20 °C and max. temperature is set to 80 C by PC-Software then a HW-Setpoint-Voltage between 0 V and 5 V leads to a temperature setpoint between 20 °C and 80 °C (arrow 1 to 7). I.E. a voltage of 2,5 V results in a temperature setpoint of 50 °C (arrow 4).

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		(mpc	
Document: 10100160OM Revision: 1.0 Date: 19.09.2022		Page 47/71	

Supplemantary detailed information:

The relationship between the setpoint temperature and the HW-Setpoint-Voltage is:

$$\vartheta = \left\{ \frac{\vartheta_{MAX} - \vartheta_{MIN}}{5,0} * U_{HW-SETPOINT} \right\} + \vartheta_{MIN}$$

and accordingly:

$$U_{HW-SETPOINT} = \frac{5,0}{\vartheta_{MAX} - \vartheta_{MIN}} * \{\vartheta - \vartheta_{MIN}\}$$

For purpose of illustration, the basic transfer function is also shown in Fig. 27 (dashed red line). It is apparent, that the slope of the transfer function has changed, it is transformed to the actual min. and max. temperature values.

Advantage: The usable adjustment range (potentiometer or voltage source) is always the full range (0 V to 5 V).

Disadvantage: The relationship between input voltage and temperature setpoint is dependent on min. and max temperature settings.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		mpc	
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 48/71

8.2. Digital Inputs and Outputs

The entire configuration of digital inputs and outputs can be carried out by PC-Software. There is no need, to modify the hardware.

8.2.1. Inputs

Digital inputs are compatible to TTL and can be configured as

- LOW active
- HIGH active

The default setting is LOW active.

Supplementary detailed information:

A pullup or pulldown resistor (10 k Ω) will be internally connected accordingly (see Fig. 28 below).

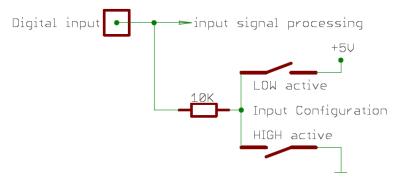


Fig. 28: Digital input circuit

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		(mpc	
Document: 10100160OM Revision: 1.0 Date: 19.09.2022		Page 49/71	

8.2.2. Outputs

Digital outputs are compatible to TTL and can be configured as

- LOW active
- HIGH active

The default setting is HIGH active.

Furthermore the output stage can be configured as

- Totem Pole (push-pull)
- Open Collector

The default setting is Totem Pole.

When set to Totem Pole, the output resistance is 330Ω .

When set to Open Collector, the output resistance is very low (0,5 Ω). In this case the output can sink up to 500 mA and is short circuit protected.

Note: Also in Open Collector configuration, the output voltage coming from the external circuit, must not exceed 5 V.

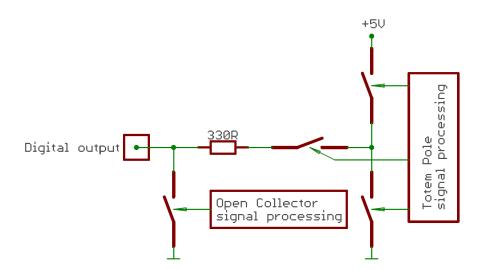


Fig. 29: Digital output circuit

MESSTEC F	Power Converter Gm	bH	
Operating Manual TEC Controller 3A Wide Range		(mpc	
Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 50/71

9. Error states

There are 3 different error states:

- Sensor Error
- Overtemperature Error
- Shortcircuit Error

If an error occurs, the TEC-Controller goes into the corresponding error state immediately. This means that:

- the TEC-Controller is disabled.
- the output stage is set to zero immediately. Output current is zero.
- the control signal output READY is set inactive.
- the ERROR LED will flash accordingly.
- it is no longer possible, to enable the TEC-Controller.

The ERROR LED is flashing periodically:

- 1 short flash: SENSOR Error
- 2 short flashes: SHORTCIRCUIT Error
- 3 short flashes: OVERTEMPERATURE Error

To clear an error, do follow the indicated procedure:

- disable HW-ENABLE input
- troubleshoot the cause of the error
- activate HW-RESET input (error state is cleared)

Now, the TEC-Controller is ready for normal operation again.

It is also possible to clear an error by clicking the Reset button in the PC-Software.

9.1. SENSOR Error

When the incoming signal from the temperature sensor is outside the normal working range of the temperature sensor input, a SENSOR Error is released. The cause may be

- sensor is broken or cabling is poor
- sensor is short circuit or cabling is poor
- in the PC-Software the arbitrary sensor or sensor current is specified inadequately

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		mpc	
Document: 10100160OM Revision: 1.0 Date: 19.09.2022		Page 51/71	

9.2. OVERTEMPERATURE Error

When the temperature of the power semiconductors exceeds 80 °C, an OVERTEM-PERATUR Error is released.

When the temperature is below 75 $^{\circ}\text{C}$ again, this error can be cleared by Reset signal

Ensure sufficient cooling if necessary.

9.3. SHORTCIRCUIT Error

When the output current of the power stage exceeds a certain level, a SHORTCIR-CUIT Error is released. The short circuit detector is implemented in hardware and therefore reacting fast (no software latency). In this way, the output stage is protectted from damage. Under normal operating conditions this current level is out of reach.

MESSTEC Power Converter GmbH Operating Manual TEC Controller 3A Wide Range Document: 101001600M Revision: 1.0 Date: 19.09.2022 Page 52/71

10. PC Software: TEC Control

TEC Control Software

- is a software package which will run on any PC.
- is compatible with all TEC-Controllers from MPC.
- is operated only using the mouse.

With the TEC Control Software it is possible to

- configure
- control
- monitor

MPC TEC-Controllers extensively.

TEC Control Software is separately available (Ordering Code 31000055).

10.1. <u>Main menu</u>

To start the program, double click the MPCTEC icon.

If there is available more than one COM-Port on your PC, during startup you will be asked to select the COM-Port, where the TEC-Controller is connected to.

TEC Control V1.05 Messtec Power Converter	X
Multiple COM ports found Please select	COM14 - COM14 COM6
Quit program	Ok
Quit program	Ok

Fig. 30: Select COM-Port

After having built up the communication, the main menu will be displayed.

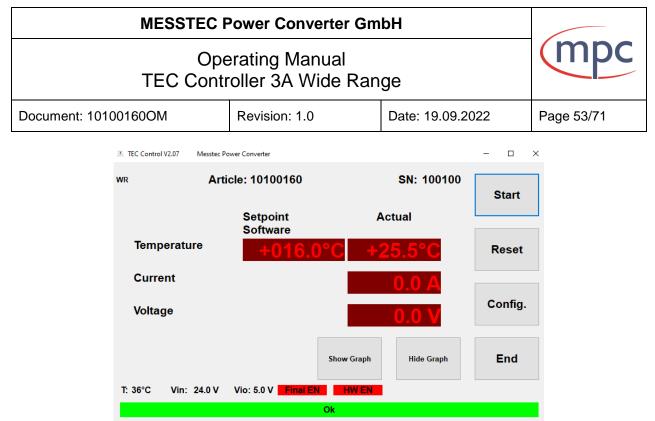


Fig. 31: Main menu

In the upper part of the main menu some general information are given:

- software version (of the PC software)
- article number (of the interconnected TEC-Controller)
- serial number (of the interconnected TEC-Controller)

	Setpoint Software	Actual	
Temperature	16.00°C	25.66°C	
Current		0.0 A	
Voltage		0.0 V	

In the middle region of the menu there is displayed:

- actual sensor temperature
- actual output current
- actual output voltage

Setpoint		
Hardware		
+039.0°C		

The temperature setpoint is displayed on the left side.

If setpoint mode is set to hardware (see configuration), this value is set by the analog voltage at the input HW-SETPOINT.

Setpoint Software	
+01	6.0°C

If setpoint mode is set to software, a single mouse click into the display opens a menu, were you can set the temperature setpoint. Just click on the up and down arrows accordingly. Click on the OK button to accept the value.

	MESSTEC Power Converter GmbH			
	Operating Manual TEC Controller 3A Wide Range		(mpc	
	Document: 10100160OM	Revision: 1.0	Date: 19.09.2022	Page 54/71
TEC Control Vi		I00100		
Can	cel	ĸ		

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range		(mpc	
Document: 10100160OM Revision: 1.0 Date: 19.09.2022		Page 55/71	
T: 29°C Vin: 48.2 V Vio: 5.0 V Final EN HW EN			

In the lower part of the main menu, some monitoring values are being displayed:

- T Temperature of the power stage or mounting plate
- Vin Level of the power supply voltage
- Vio Level of the reference voltage output (X1-4)

Final EN: Final EN : Final Enable is disabled

Final EN : Final Enable is enabled

 HW EN:
 HW EN
 : Hardware Enable is disabled

 HW EN
 : Hardware Enable is enabled

The behavior of the internal safety signal <u>Final EN</u> is dependent on the ENABLE MODE and the input signal HW ENABLE (see chapter "Control Signals Digital X2" and "Configuration").

HW EN is reflecting the state of the input signal HW ENABLE.

Ok

The status bar at the bottom shows the general condition of the TEC-Controller:

TEC-Controller is working fine, there are no errors.

If the TEC-Controller is enabled, then Ok means, the sensor temperature is within $+/-1^{\circ}C$ of the setpoint.

	TEC temperature high
or	
	TEC temperature low

TEC-Controller is enabled and sensor temperature is outside +/- 1°C of the temperature setpoint.

TEC sensor error

Errors are marked in red. See also chapter Error states.

Timeout


USB connection does not work properly. Double check cabling of serial interface or COM-port setting and restart program.

	MESSTEC F	ower Converter Gr	ıbH	
Operating Manual TEC Controller 3A Wide Range				(mpc
Document: 101	100160OM	Revision: 1.0	Date: 19.09.2022	Page 56/71
Start	With the Start button the TEC-Controller is enabled, when enable mode is set to software. When set to hardware, the Start button is greyed out (see right). Start			
Reset		utton, error states can a Reset button for the	·	ates).
Config.	Config. button opens the Configuration menu (see Configuration). Note: The Config. button is only active, when the TEC-Controller is disabled.			
End button quits the PC-Software.				

Show Graph

Hide Graph

It is possible, to show the temperature profile in a graphic chart. With Show Graph and Hide Graph the chart is opened or closed, respectively. Axes are scaled automatically.

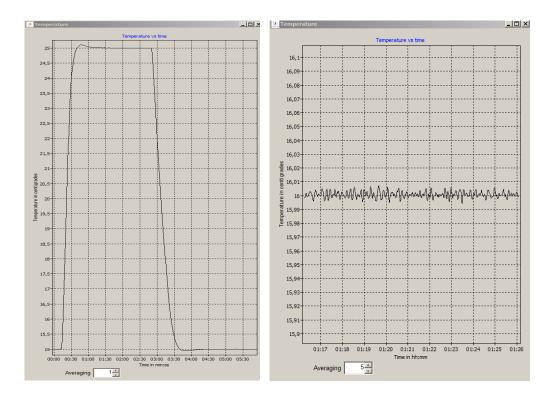

MESSTEC F			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 57/71

On the bottom of the Graph it is possible to choose an averaging factor. Default setting is 5.

The size of the graph window can be set by clicking on one of the corners with the left mouse button, and holding the mouse button. Move the corner to set desired size.

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022		Page 58/71	

10.2. <u>Configuration</u>

🦛 TEC Control V2.06 Messtec Power Conve	ter	- 🗆 X
Configuration	Article: 10100175	SN: 100100
Temperature limits	Sensor selection	Colours
MIN= -100°C Max= 200°C	Pt 1000	
Current limit	Control parameter	Language
6.0A	kp=2000 ki=50 kd=0	
Voltage limit	Enable Setpoint	IO config
48.0V	Hardware Software	
Boundary Mode	Output Stage Mode	ок
Clipping	cooling + heating	
T: 28°C	/in: 23.9 V Vio: 5.0 V Final EN	HW EN

Fig. 32: Configuration

Note: It is possible to enter the configuration menu, only if the TEC-Controller is disabled.

Below the buttons, the selected and active configuration is displayed.

In most menus the desired value is set by clicking the up or down arrow buttons accordingly.

T: 32°C	Vin: 48.	2 V Vio: 5.0 V
	Final EN	HW EN

In the lower part of the configuration menu, the same monitoring values are being displayed as in the main menu (see section Main menu).

	ME	SSTEC Power Conve	rter GmbH	
	Operating Manual TEC Controller 3A Wide Range			(mpc
	Document: 10100160OM	1 Revision: 1.0	Date: 19.09.2022	2 Page 59/71
	10.2.1. <u>Temp</u> e	erature limits		
	Temperature limits Click this button to open the next menu. Here it is possible to set temperature limits. MIN= -100°C Max= 200°C MIN Temperature must be at least 1 °C below MAX Tempe-rature. Only then it is possible to confirm with Ok.			
		Messtec Power Converter	10100175	- □ × 100100
	M	in. Temperature	Max. Temperature	•
	Cancel			

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 60/71


10.2.2. Current limit

Click this button to open the next menu. Here it is possible to
set the maximum output current.

Note: Lowest setting is 1 A. Highest setting is 3 A.


3.0A

Current limit

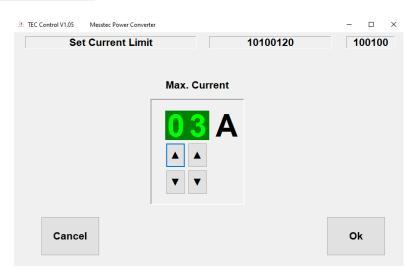

10.2.3. Voltage limit

Voltage limit	Click this set the r	s button to open the next menu. Here it is possible to naximum output voltage.
	Noto	Lowest actting is 1 \/ Highest actting is 19 \/
48.0V	Note:	Lowest setting is 1 V. Highest setting is 48 V.

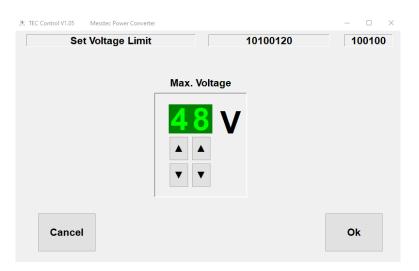

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 61/71


10.2.4. Boundary Mode



Click this button, to change the setting of the HW-Setpoint Boundary Mode.

See also: Configuration in Detail / HW Setpoint.

10.2.5. Sensor selection

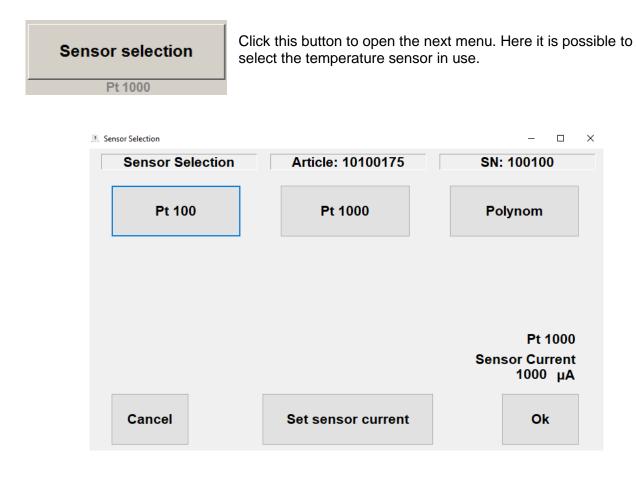

See also section "Temperature sensor".

MESSTEC Power Converter GmbH			
Operating Manual TEC Controller 3A Wide Range			(mpc
Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 62/71

10.2.6. Control parameter

Control parameter	Click this button to open the next menu. Here it is possible to adjust the control parameters.
kp=6000 ki=100 kd=0	

TEC Control V1.05			
C	ontrol Parameter	10100130	100102
kp	4000	00400	0
ki	150		
kd	0		•
Canc	el		Ok

- kp: Coefficient of the proportional component of the control loop
- ki: Coefficient of the integral component of the control loop
- kd: Coefficient of the derivative component of the control loop

Note: kd is used only in very rare and exceptional cases.

In most cases it is not necessary to alter control coefficients. If you do need to make adjustments to control coefficients, consider small steps and double check the result after each step.

Note: Modifications of control coefficients in the wrong direction will quickly result in total malfunction and instability of the control loop. This may further damage your system setup.

	MESSTEC	Power Converter Gr	nbH				
	Operating Manual TEC Controller 3A Wide Range						
Document: 101	Document: 10100160OM Revision: 1.0 Date: 19.09.2022 H						
10.2.	10.2.7. Enable Mode						
Frabla		to change the enable r the TEC-Controller car	node between hardware n be activated.	e and software.			
Software		he Start button in the m	able activates the TEC-0 nain menu and the input mbination, activates the	signal			
	See also sectior	n Control Signals Digi	tal X2.				
Enable		node can only be chang ne input signal HW Ena	ged (Enable button is ac ble is disabled.	tive), when			
		nable mode is set to har not active.	dware, the Start button	in the main			
10.2.	8. <u>Setpoint Mode</u>						
Setpoint		•	mode between hardware is determined and ent				
	ra	apture, is applied to the	n is proportional to the s HW SETPOINT input. e is selected in the main				
Setpoint	See also sectior	n Control Signals Ana	log X1.				
Hardware		SETPOINT input is hig ion Configuration in De	, ,				
10.2.	9. <u>Output Stage M</u>	lode					
Output Stage Mode	Click this button "heating only".	to change the power s	tage between "cooling +	- heating" and			
Cooling + heating	cooling + heatin		r stage is able to supply the default mode and ir ements.				
heating only	heating only:		r stage is able to supply mode is intended for op				

	MESSTEC Power Converter GmbH					
	Operating Manual TEC Controller 3A Wide Range					(mpc
	Document: 10100160OM Revision: 1.0 Date: 19.09.2022			Page 64/71		
	10.2.10. <u>Colours</u>	+ Firmware \	Version			
Ca	olours Click this button desired.	to open the n	ext menu.	Colours can be	custom	ized as
	3 TEC Control V2.06 Messtec Power Converter -					× ב
	Colour Set	tup		FW2022.0	9.01	
	Ba Main Screen	ackground	Numbers	Preview 123		
	Setup Screens			123		
	Cancel				Ok	

In addition this page shows the version of the firmware, running on the MCU.

FW2022.09.01

MESSTEC F	
Ope TEC Contr	mpc
Document: 10100160OM	Page 65/71

10.2.11. Language

Language

Click this button to open the next menu. Select language as desired.

TEC Control V1.05 Messtec Power Convert Set Language	ter		
Language	english	×	
		_	
Cancel			Ok

10.2.12. <u>IO Configuration</u>

It is possible to change and customize the configuration of digital inputs and digital outputs in a substantial way.

Digital inputs:

- LOW active
- HIGH active

Digital outputs:

- LOW active
- HIGH active
- Totem pole (push-pull)
- Open collector

See also section Configuration in Detail / Digital inputs and Outputs.

Example: Changing the input CD-ENABLE from active LOW to active HIGH.

Configurations in this domain generally have big influence to the control behavior of the TEC-Controller and its setup. To avoid damage and malfunction in any case, the TEC-Controller goes into a Safe-State, which only can be left by switching off the power supply of the TEC-Controller. Then it is possible to adjust the setup (wiring, control logic etc.) safely.

MESSTEC F	
Ope TEC Contr	mpc
Document: 10100160OM	Page 66/71



Click this button to open the next menu.

At first a warning message will appear. Once you are certain, you know what you are doing, click the continue button.

🔄 IO Configuration						
Warning						
The following menu allows you to change the I/O configuration. Changing these setting require changes in hardware. A wrong setting can damage your system. Do you really want to continue?						
go back			continue			
3 10 Configuration			- 10			
HNK: 10100135	SN: 1001	03				
Input con	figuration	Attention		-		
	RESET	Pressing the "OK"-Button The TEC-Controller will g				
• High active	• High active	Then, please perform the 1. Disconnect the TEC-C	following steps:			
 Low active 	 Low active 	2. Change the wiring of y				
		3. Reconnect the power.				
Output co	nfiguration					
READY	STATE					
 High active Low active 	 High active Low active 	([•		
• Totem pole	• Totem pole					
• Open collector	• Open collector	Cance	н ок			
	•					

Now you can select the configuration of digital inputs and digital outputs as desired.

Please follow the advice, displayed in the window. After pressing the OK button, the TEC-Controller will go into a save state. This is normal procedure, a safety measure and NOT an error state.

MESSTEC F			
	erating Manual oller 3A Wide Ran	ge	(mpc
Document: 10100160OM	Page 67/71		

A final note will be displayed.

3 IO Configuration	<u>_ ×</u>
Note	
The TEC is in save state. Please disconnect it from power and change the wiring. When you are ready please repower the TEC and restart the software. Pressing the "OK" Button will terminate the program	
ок	

After clicking the OK button, the PC Software will be terminated automatically.

Next, disconnect the TEC-Controller from the power supply.

Change the wiring and control logic configuration of your setup according to the just altered IO configuration of the TEC-Controller.

Switch on the power supply of the TEC-Controller again. Start the PC-Software again.

Now the setup and the TEC-Controller is operating with the new IO configuration.

MESSTEC F					
	Operating Manual TEC Controller 3A Wide Range				
Document: 10100160OM	Page 68/71				

10.3. USB Driver


When the TEC-Controller (USB version) is connected to the PC for the first time, the correct USB driver will be installed automatically.


In any case, the correct USB driver is located on the CD-ROM.

MESSTEC F	
Ope TEC Contr	(mpc
Document: 10100160OM	Page 69/71

11. <u>Drawings</u>


11.1. <u>Mechanical Drawings</u>

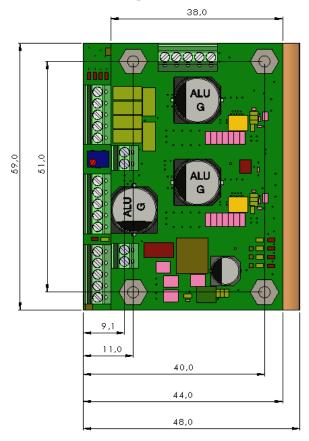

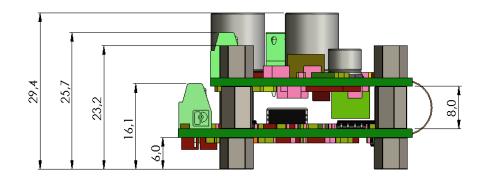

MESSTEC F					
	Operating Manual TEC Controller 3A Wide Range				
Document: 10100160OM	Page 70/71				

11.2. <u>Mounting Positions</u>

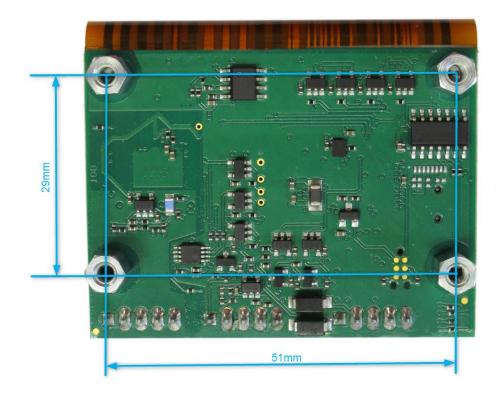

Bottom view

MESSTEC Power Converter GmbH Operating Manual TEC Controller 3A Wide Range Document: 101001600M Revision: 1.0 Date: 19.09.2022 Page 71/71

12. TEC-Controller family

Туре	Description	Ordering code
TEC 3-50-U-WR	TEC 3A with USB interface	10100160
TEC 3-50-R-WR	TEC 3A with RS232 interface	10100161
RS232 interface cable	USB Mini-B to SubD9F adapter cable	10385263
USB cable	Mini-B to Standard-A cable	10385120
USB cable	Mini-B to Type-C cable	11385247
TEC Software	Control-Software for PC	31000055
Temperature Sensor	Pt1000 (without cable)	10805048

Contact Data MESSTEC Power Converter GmbH Grube 41 D-82377 Penzberg Phone +49 (0) 8856-80306-0 info@powerconverter.com www.powerconverter.com

Technical subjects to change without notice.